

PL-2305 USB-to-Printer Cable User Installation Guide

Introduction

The PL-2305 USB-to-Printer cable provides a bi-directional bridge between the USB host system and IEEE-1284 parallel port printers. The PL-2305 chip is designed to be a flexible, high performance, and low-cost single-chip solution for USB cables as well as USB ready peripheral manufacturers.



Note: The following Operating Systems follow the IEEE 1284 Specification to support standard built-in USB printing class drivers bundled inside the OS:

- Windows 2000, XP, Vista, 7.
- Mac OS 9.x to 10.x.
- All Linux compatible OS (recommended kernel 2.4.x and above versions)

When you plug in the PL-2305 USB-to-Printer cable, Windows OS will automatically detect the cable device and will install the needed driver. The USB-to-Printer cable will appear as "USB Printing Support". You do not need to manually install any separate driver except maybe for some printer devices attached to the PL-2305 cable.

This document will show you an example on how to install the PL-2305 cable with a printer device.

System Requirement

The following requirements are needed:

- Operating System: Windows 2000 or above versions; Mac OS 9.x or above; Linux OS.
- PC or USB host device with USB 1.1 or higher port
- PL-2305 USB-to-Printer Cable/Adapter

Prolific Technology Inc.

- 1 of 8 -



Windows OS Installation

The following steps will show how to install the HP LaserJet 6L printer device attached to the PL-2305 cable under Windows operating system:

- 1. Attached the IEEE-1284 parallel printer device to the PL-2305 cable. Power on the printer and then plug the PL-2305 cable to the USB port of the computer.
- Windows will first detect the PL-2305 cable device as a "USB Printing Support" device shown under Device Manager-USB controllers.





3. Windows will next detect the attached printer device but some Windows version like Windows 7 may not include the printer device drivers. You may need to right-click on printer device and run Update Driver thru Windows Update to download the printer driver. If Windows Update could not find the printer device driver, you may need to contact the printer manufacturer or go to the printer manufacturer website to download the printer device driver for the OS version you have.



You can also refer to HP Printer support website about Windows 7 printer driver installation: http://h20000.www2.hp.com/bizsupport/TechSupport/Document.jsp?&objectID=c02536257



4. Right-click on the printer device in Device Manager and click Update Driver. Make sure you have an Internet connection. Then click to search automatically for updated driver software.



5. Once the printer device driver is properly installed, the printer device will disappear from the Device Manager. You then need to click Start-Devices and Printers to check the installed printer device. Right-click on the printer device and click Printer Properties for more settings.



Prolific Technology Inc.



6. You can check the virtual printer port settings (USB001) by clicking on the Ports tab folder under the Printer device Properties. You can also run a Print Test Page under General tab folder.

🖶 HP LaserJet 6	L Properties			x
General Sharin	g Ports Advanced C	olor Management	Security Device S	ettings
ee ee	P LaserJet 6L			
Print to the for checked port	ollowing port(s). Docume	ents will print to	the first free	
Port	Description	Printer		
COM1:	Serial Port			-
COM2:	Serial Port			
COM3:	Serial Port			
COM4:	Serial Port			=
FILE:	Print to File			
✓ USB001	Virtual printer port for.	. HP LaserJet 6	L	
XPSPort:	Local Port	Microsoft XP	S Document Writer	-
Add P	or <u>t</u> <u>D</u> ele	te Port	<u>C</u> onfigure Port.	
Enable bid	irectional support			
Enable prir	nter pooling			
E c <u>n</u> abic pin	iter pooling			
		ок	Cancel	pply



Mac OS Installation

The following steps will show how to install the HP LaserJet 6L printer device attached to the PL-2305 cable under Mac OS X operating system:

 Attached the IEEE-1284 parallel printer device to the PL-2305 cable. Power on the printer and plug the PL-2305 cable to the USB port. Run System Profiler under Applications-Utilities folder. Click on USB hardware on the left column and look for the PL-2305 device under the USB Device Tree where Mac OS X also already installs HP LaserJet 6L printer drivers.

000		MacBook	
SE-MacBook's MacBook		9/10/09 10:33 AM	OOO About This Mac
Contents		USB Device Tree	
▼ Hardware	0	USB Bus	
ATA	111	USB Bus	0
Audio (Built In)	111	▼ USB Bus	
Bluetooth	111	Apple Internal Keyboard / Trackpad	
Diagnostics	111	IR Receiver	
Disc Burning	111	▼ USB Bus	
Ethernet Cards	111	Bluetooth USB Host Controller	Mac OS V
Fibre Channel	111	PL-2305	Mac US X
FireWire	111	USB Bus	Version 10.6
Graphics/Displays	111	▼ USB High-Speed Bus	
Hardware RAID	111	Built-in iSight	Software Update
Memory	111	USB High-Speed Bus	
PCI Cards	111		Processor 2.1 GHz Intel Core 2 Duo
Parallel SCSI		(
Power	111	PL-2305:	Memory 1 GB 667 MHz DDR2 SDRAM
Printers	111	Product ID: 0x2305	Startup Dick 10.6
SAS	111	Vendor ID: 0x067b (Prolific Technology, Inc.)	Startup Disk 10.0
Serial-ATA	111	Version: 2.02	More Info
USB	ч.	Speed: Up to 12 Mb/sec	
Network	U	Location ID: 0x1a200000	TM and © 1983-2009 Apple Inc.
AirPort		Current Available (mA): 500	All Rights Reserved.
Firewall		Current Required (mA): 100	
Locations		1284 Device ID: MFG:Hewlett-Packard;CMD SeT:HP ENHANCED PCL5,PJL;MODEL:HP LaserJet	the second s
Modems		0101:	
Volumes			
WWAN			
▼ Software	¥		
Applications	1		
Developer	11	l li	

2. Go to Preferences and click on Print & Fax to add the LaserJet 6L Printer.

74 V		Q	
ult Fax	IP Windows	Se	arch
rinter Name		A King	d
P LaserJet 6L		USB	
Name:	HP LaserJet 6L		
Name: Location:	HP LaserJet 6L SE-MacBook's I	MacBook	
Name: Location: Print Using:	HP LaserJet 6L SE-MacBook's I HP LaserJet 6L	MacBook - Gutenprint v5.2.3	
Name: Location: Print Using:	HP LaserJet 6L SE-MacBook's I HP LaserJet 6L The selected print not let you use all	MacBook - Gutenprint v5.2.3 ter software isn't from the mani the features of your printer.	facturer and may

Prolific Technology Inc.



3. Open a document and click File-Print. Select the printer attached to the PL-2305 cable and click Print button.

Printer: Presets:	HP LaserJet 6L Standard	: •		
? PDF ▼	Preview	Cancel	Print	
00		🚐 HP LaserJet 61	L	\Box
Delete Hold Job	Info Pause Printer Supp	ly Levels Printer Setup	1	
	Printer Ready			
Status	Name	Sent	Completed	

Prolific Technology Inc.



Linux OS Installation

The following steps will show how to install the HP LaserJet 6L printer device attached to the PL-2305 cable under Linux operating system:

 Attached the IEEE-1284 parallel printer device to the PL-2305 cable. Power on the printer and plug the PL-2305 cable to the USB port. Run Terminal program and type "dmesg" to show the detected hardware devices. On the last lines of the message, you will find USB bidirectional printer is detected with VID 0x067B and PID 0x2305.

[474.212036] usb 2-1: new full speed USB device using ohci hcd and address 3
[474.424174] usb 2-1: configuration #1 chosen from 1 choice
[474.443191] usblp0: USB Bidirectional printer dev 3 if 0 alt 1 proto 2 vid 0x067B pid 0x2305
	475.499784] usb 2-1: usbfs: interface 0 claimed by usblp while 'usb' sets config #1

2. You can also type following to check the USB printer device:

cd /dev ls usblp*

(this will show you all the USB printer devices attached)

3. To test print, you can just open any document and click File-Print and choose the printer name attached to the PL-2305 cable.

Jene	eral Pa	age Setup	image Sett	ings Job I	Image Quality	Advance	ed	
	Printe	r	Location	Status				
2	Print t	o File						
8	HP-La	seijet-6L	betty-deskto	p				
Rar	nge All Pa	ages			Copie Copi	s es:	1 *	
Rar	nge All Pa	ages ent Page			Copie	s es:		

Prolific Technology Inc.

- 8 of 8 -